W10 PRO

QUICK START GUIDE

GETTING STARTED

Thank you for purchasing a Hipstreet product and we hope you enjoy using it.

Please visit our website at www.hipstreet.com

IMPORTANT SAFETY PRECAUTIONS

- Always follow these basic safety precautions when using the unit. This will reduce the risk of product damage and personal injury.
- Do not disassemble, repair or modify the unit by yourself. Refer servicing to qualified personnel.
- Do not dispose of the unit in extreme heat to avoid explosion.
- Keep the unit away from direct sunlight or heat source.
- Do not expose the unit to rain or moisture to avoid any malfunction.
- Do not use the unit in a rather dry environment to avoid static.
- Never apply heavy impact on the unit like dropping it or placing it on a magnet.
- Clean only with a dry cloth. Make sure the unit is turned off before cleaning. Do not use liquid cleanser.

GETTING STARTED

Device Layout:

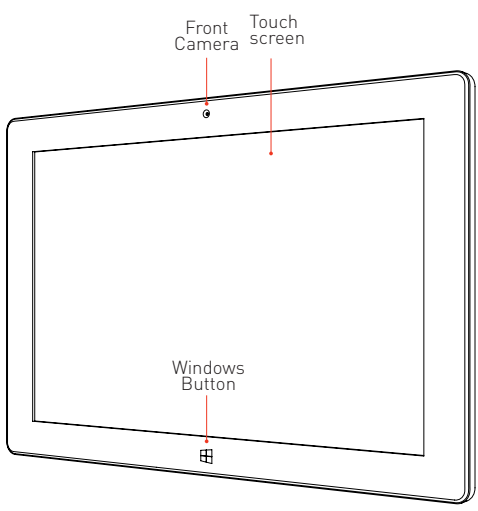

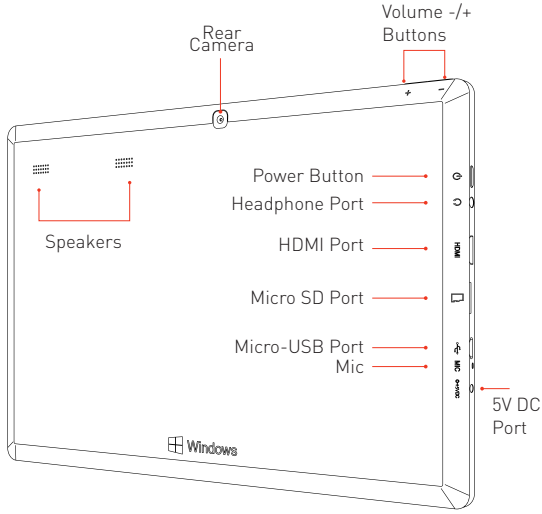

GETTING STARTED

*Case material is of Polyurethane

Keyboard Layout:

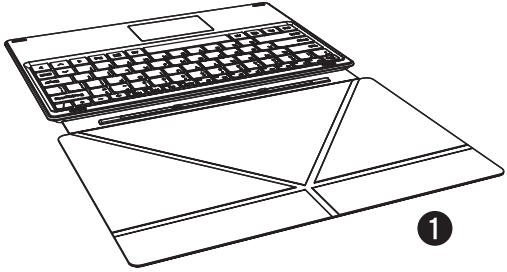

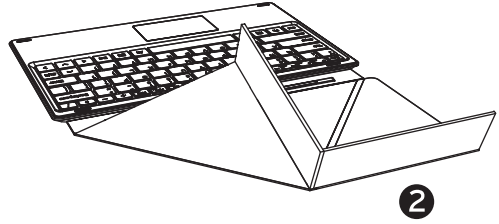

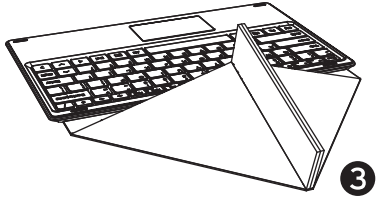

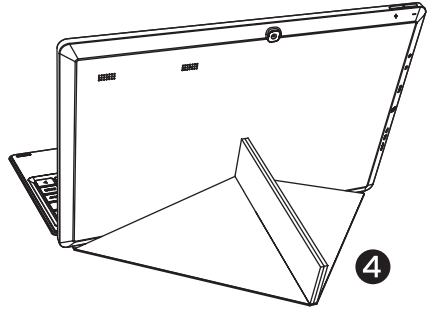

OVERVIEW

Start screen:

The **Start** screen is the first thing you see when you login to Windows. It is the main (home) area where you can access apps, check real-time information, and search for files. This interface is optimized for touch screens. You can get to the **Start** screen by pressing the **Windows** button on the tablet, or tapping the **Start** icon in **Charms Bar**.

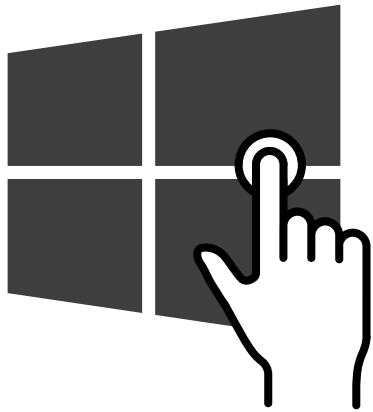

OVERVIEW

Each tile on the Start screen is a shortcut to an app, web site or anything else you find important. To open an app, simply tap the associated tile.

To open an app that is not pinned to the Start screen, swipe up from the middle of screen to open application view, and then tap the icon.

OVERVIEW

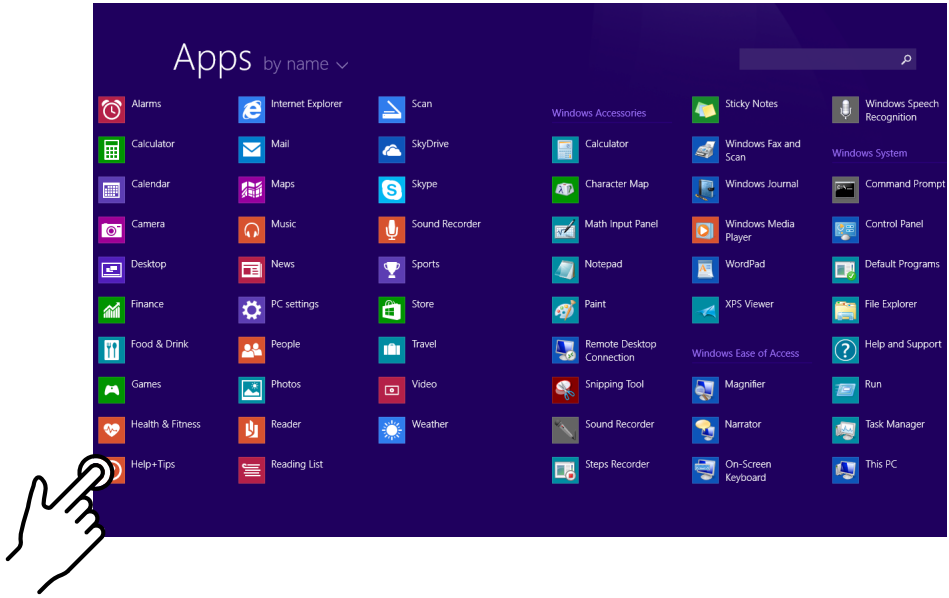
Apps by name
Alarms
Calculator
Calendar
Camera
Desktop
Finance
Food & Drink
Games
Health & Fitness
Help+Tips
Internet Explorer
Mail
Maps
Music
News
PC settings
People
Photos
Reader
Reading List
Scan
SkyDrive
Skype
Sound Recorder
Sports
Store
Travel
Video
Weather
Windows Accessories
Calculator
Character Map
Math Input Panel
Notepad
Paint
Remote Desktop Connection
Snipping Tool
Sound Recorder
Steps Recorder
Sticky Notes
Windows Fax and Scan
Windows Journal
Windows Media Player
WordPad
XPS Viewer
Windows Ease of Access
Magnifier
Narrator
On-Screen Keyboard
Windows Speech Recognition
Windows System
Command Prompt
Control Panel
Default Programs
File Explorer
Help and Support
Run
Task Manager
This PC

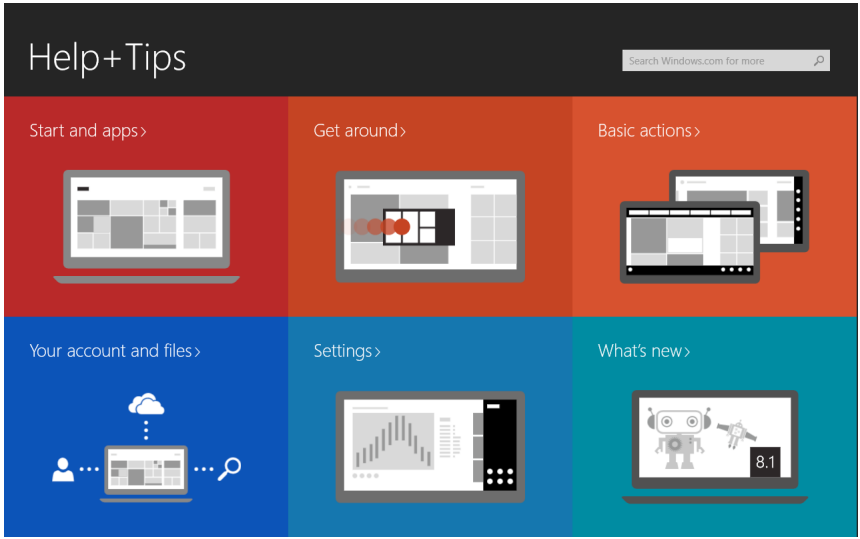

To close an app, swipe **Down** from the **Top** of the screen.

OVERVIEW

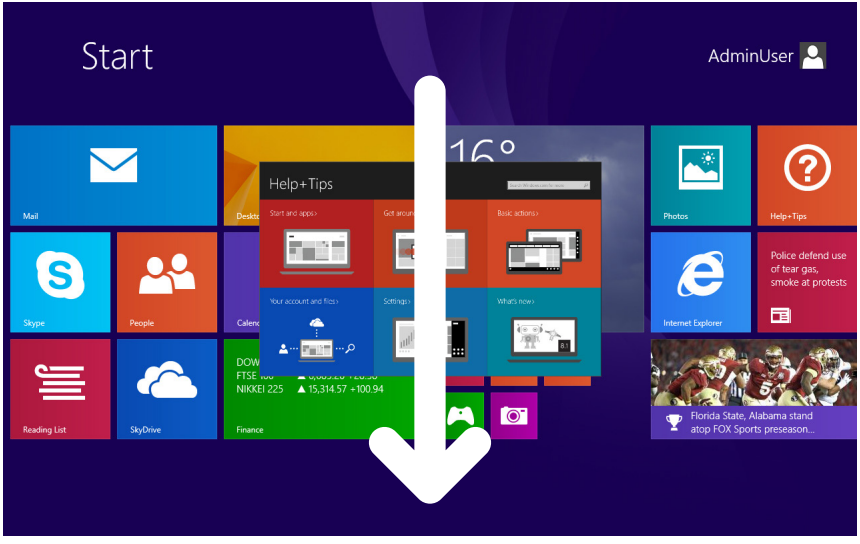
Start
AdminUser
Mail
Skype
People
Reading List
SkyDrive
Finance
NIKKEI 225
▲15,314.57 +100.94
Help+Tips
Photos
Help+Tips
Internet Explorer
Police defend use of tear gas, smoke at protests
Florida State, Alabama stand atop FOX Sports preseason...

OVERVIEW

You can personalize this screen by pinning your favorite Windows apps, and arranging them any way you want.

1. To pin an app on the Start screen, touch and hold an app in application view, then tap Pin to Start at bottom-left corner of the screen.

2. A new tile will be created on the Start screen associated with the app you just selected.

3 (a+b). You can hold a tile and drag it anywhere on the Start screen.

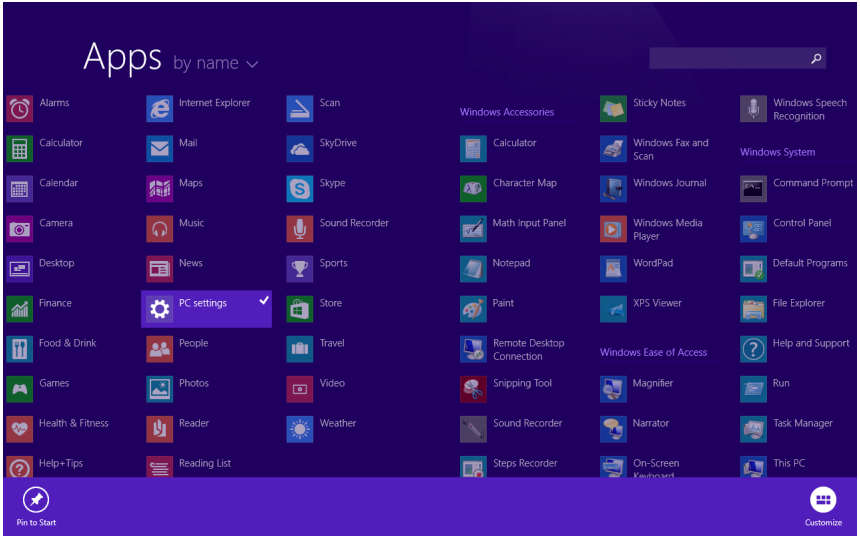
Apps by name
Alarms
Calculator
Calendar
Camera
Desktop
Finance
Food & Drink
Games
Health & Fitness
Help+Tips
Internet Explorer
Mail
Maps
Music
News
PC settings
People
Photos
Reader
Reading List
Scan
SkyDrive
Skype
Sound Recorder
Sports
Store
Travel
Video
Weather
Windows Accessories
Calculator
Character Map
Math Input Panel
Notepad
Paint
Remote Desktop Connection
Snipping Tool
Sound Recorder
Steps Recorder
Sticky Notes
Windows Fax and Scan
Windows Journal
Windows Media Player
WordPad
XPS Viewer
Windows Ease of Access
Magnifier
Narrator
On-Screen Keyboard
Windows Speech Recognition
Windows System
Command Prompt
Control Panel
Default Programs
File Explorer
Help and Support
Run
Task Manager
This PC
Pin to Start
Customize

1

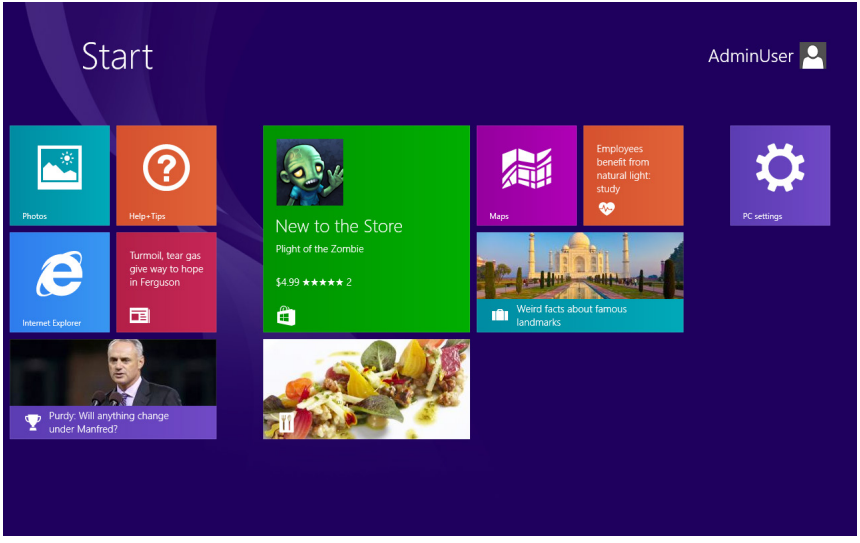
Start
AdminUser
Photos
Help+Tips
New to the Store
Plight of the Zombie
$4.99 ★★★★★ 2
Maps
Employees benefit from natural light: study
PC settings
Internet Explorer
Turmoil, tear gas give way to hope in Ferguson
Weird facts about famous landmarks
Purdy: Will anything change under Manfred?

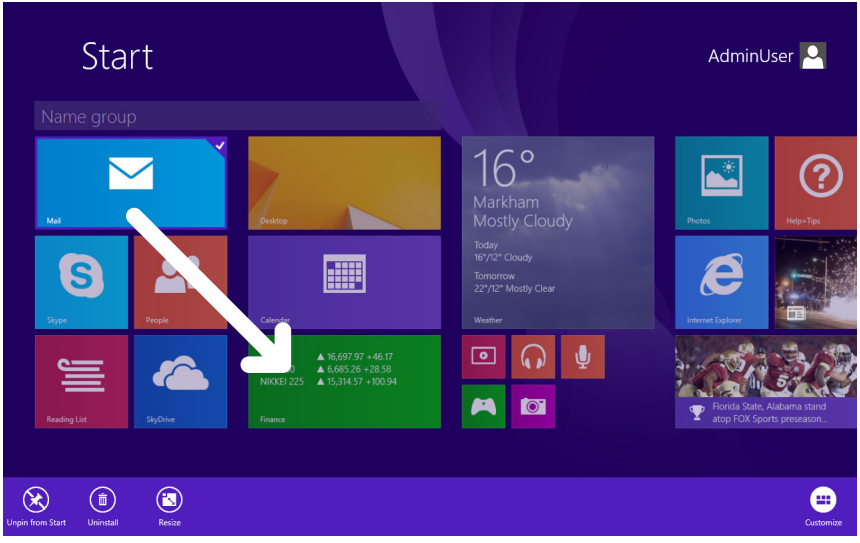
Start
AdminUser
Name group
Mail
Desktop
16°
Markham
Mostly Cloudy
Today
16°/12° Cloudy
Tomorrow
22°/12° Mostly Clear
Weather
Photos
Help+Tips
Skype
People
Calendar
Internet Explorer
Reading List
SkyDrive
NIKKEI 225
16,697.97 +46.17
6,685.26 +28.58
15,314.57 +100.94
Finance
Florida State, Alabama stand atop FOX Sports preseason...
Unpin from Start
Uninstall
Resize
Customize

3(a)

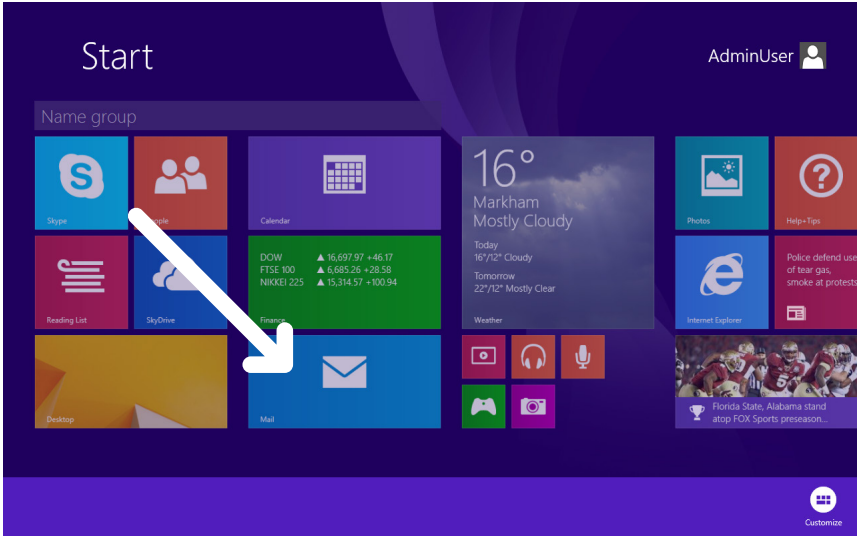
Start
AdminUser
Name group
Skype
Calendar
16°
Markham
Mostly Cloudy
Today
16°/12° Cloudy
Tomorrow
22°/12° Mostly Clear
Weather
Photos
Help+Tips
Reading List
SkyDrive
DOW ▲16,697.97 +46.17
FTSE 100 ▲6,685.26 +28.58
NIKKEI 225 ▲15,314.57 +100.94
Finance
Internet Explorer
Police defend use of tear gas, smoke at protests
Desktop
Mail
Florida State, Alabama stand atop FOX Sports preseason...
Customize

3(b)

OVERVIEW

Charms Bar:

The Charms Bar lets you perform searches, access settings, share files, and so on. You can open the Charms Bar by swiping Left from the Right side of the screen.

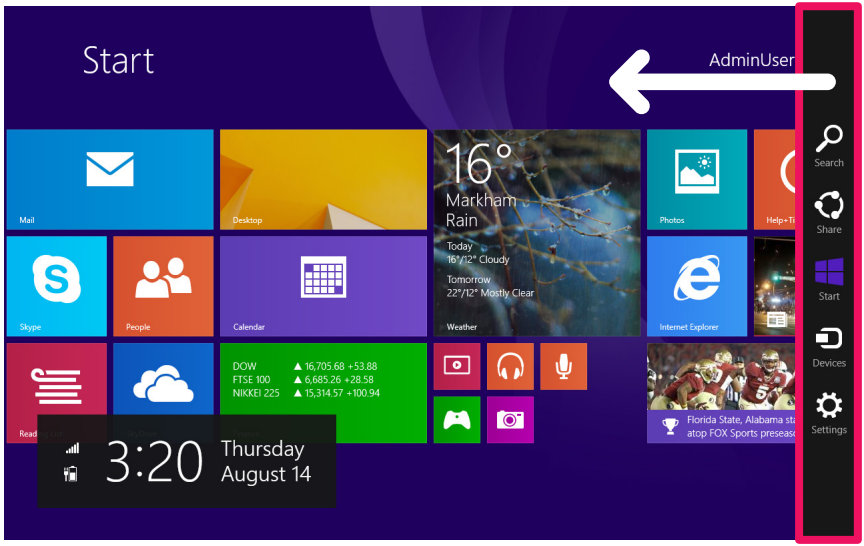

OVERVIEW

SEARCH:
You can search through anything on your Windows operating system.

SHARE:
Lets you share things with other people, such as photos, and documents.

START:
Take you back to the Start screen.

DEVICES:
You can view and manage wireless devices.

SETTINGS:
Quick access to common system settings (volume, brightness, internet connection).

GESTURES

Your Windows Tablet supports the use of touch gestures, and here are the basic actions you can do using the touch screen.

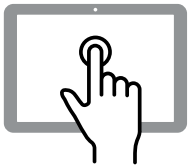

Open/Make Selections from an app: Tap

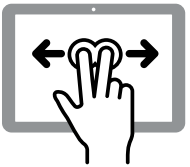

Zoom out: Move 2 fingers farther apart

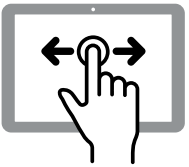

Scroll through items: Swipe left or right

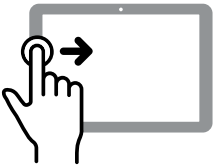

Switch between apps: Swipe right from the left side of the screen

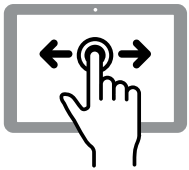

Move an object: Touch & hold, then drag

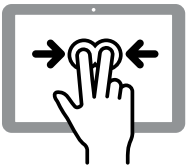

Zoom in: Move 2 fingers closer together

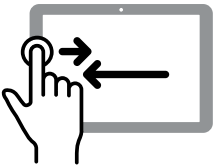

View between apps: Swipe right, then left from the left side of the screen

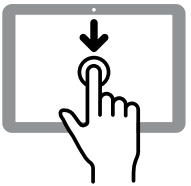

Close an app: Slide down from the top edge of the screen

WI-Fi SET-UP

Your Windows Tablet provides a simple interface for connecting to wireless internet. You can easily connect to any wireless routers as long as you know the Wireless Name (SSID) and password of the network you're connecting to.

1. Tap the **Settings** in **Charms Bar**.

2. Tap the network icon.

3. Select your wireless network from the list, and then tap **Connect**.

WI-FI SET-UP

Start
AdminUser
Mail
Desktop
16°
Markham
Rain
Today
16°/12° Cloudy
Tomorrow
22°/12° Mostly Clear
Weather
Photos
Help+Tips
Skype
People
Calendar
Internet Explorer
DOW ▲ 16,705.68 +53.88
FTSE 100 ▲ 6,685.26 +28.58
NIKKEI 225 ▲ 15,314.57 +100.94
Florida State, Alabama
atop FOX Sports presea...
3:20
Thursday
August 14
Search
Share
Start
Devices
Settings

WI-Fi SET-UP

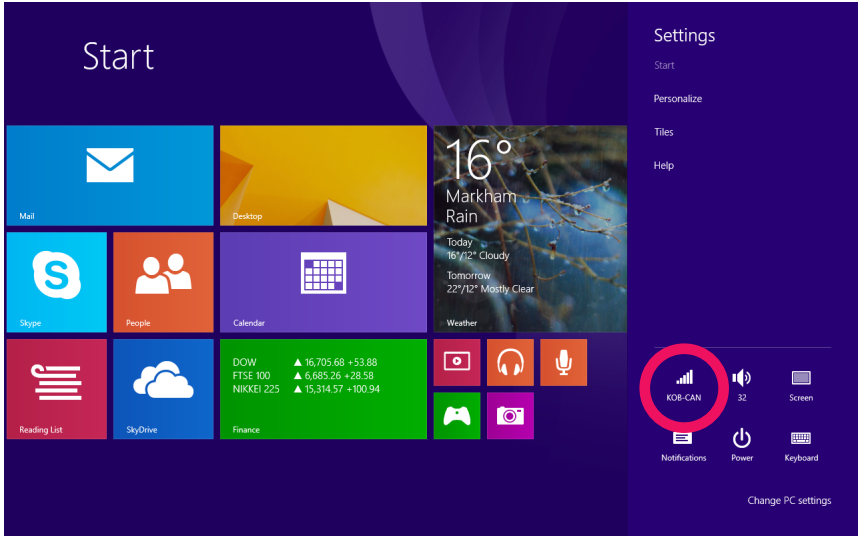
Start
Mail
Desktop
16°
Markham
Rain
Today
16°/12° Cloudy
Tomorrow
22°/12° Mostly Clear
Weather
Skype
People
Calendar
Reading List
SkyDrive
DOW ▲ 16,705.68 +53.88
FTSE 100 ▲ 6,685.26 +28.58
NIKKEI 225 ▲ 15,314.57 +100.94
Finance
Settings
Start
Personalize
Tiles
Help
KOB-CAN
32
Screen
Notifications
Power
Keyboard
Change PC settings

WI-FI SETUP

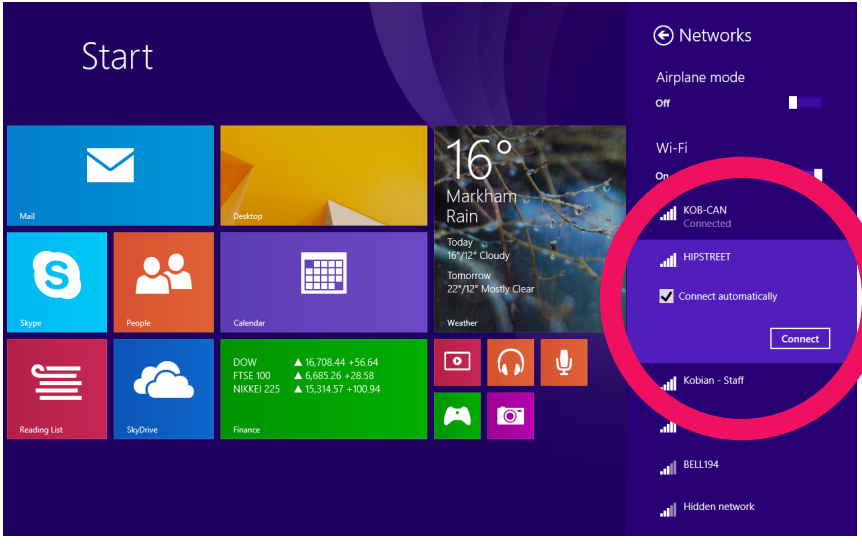
Start
Mail
Desktop
16°
Markham
Rain
Today
16°/12° Cloudy
Tomorrow
22°/12° Mostly Clear
Weather
Skype
People
Calendar
Reading List
SkyDrive
DOW ▲ 16,708.44 +56.64
FTSE 100 ▲ 6,685.26 +28.58
NIKKEI 225 ▲ 15,314.57 +100.94
Finance
Networks
Airplane mode
Off
Wi-Fi
KOB-CAN
Connected
HIPSTREET
Connect automatically
Connect
Kobian - Staff
BELL194
Hidden network

WI-Fi SET-UP

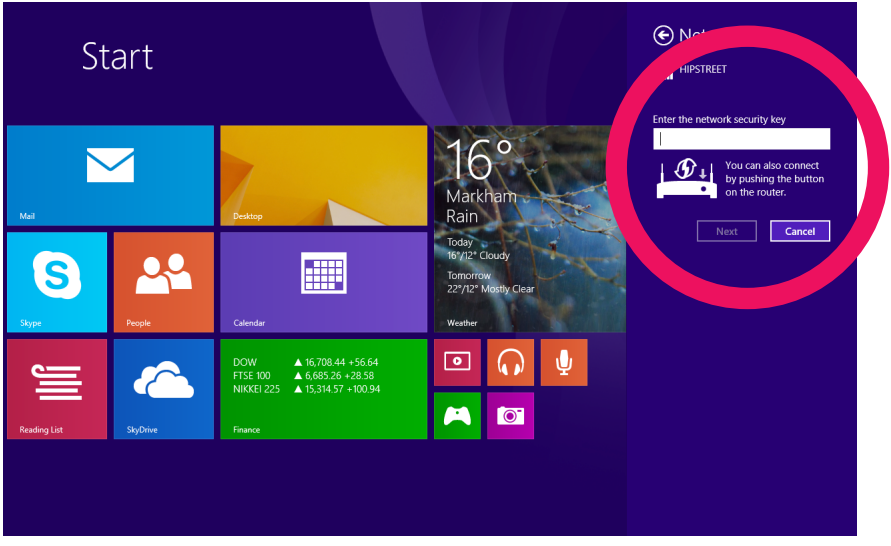
Start
Mail
Desktop
16°
Markham
Rain
Today
16°/12° Cloudy
Tomorrow
22°/12° Mostly Clear
Weather
Skype
People
Calendar
Reading List
SkyDrive
DOW ▲ 16,708.44 +56.64
FTSE 100 ▲ 6,685.26 +28.58
NIKKEI 225 ▲ 15,314.57 +100.94
Finance
HIPSTREET
Enter the network security key
You can also connect by pushing the button on the router.
Next
Cancel

WI-FI SETUP

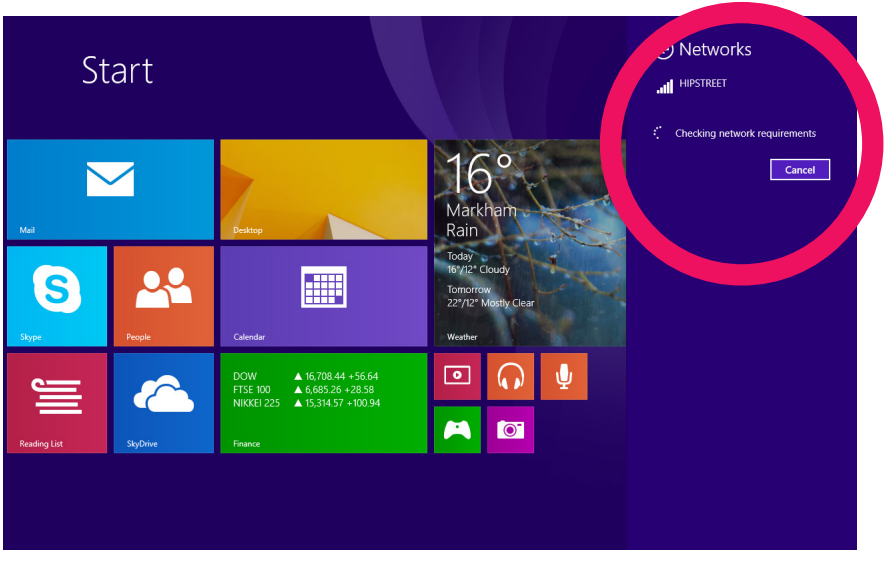
Start
Mail
Desktop
Skype
People
Calendar
16°
Markham
Rain
Today
16°/12° Cloudy
Tomorrow
22°/12° Mostly Clear
Weather
Reading List
SkyDrive
DOW ▲ 16,708.44 +56.64
FTSE 100 ▲ 6,685.26 +28.58
NIKKEI 225 ▲ 15,314.57 +100.94
Finance
Networks
HIPSTREET
Checking network requirements
Cancel

WI-Fi SET-UP

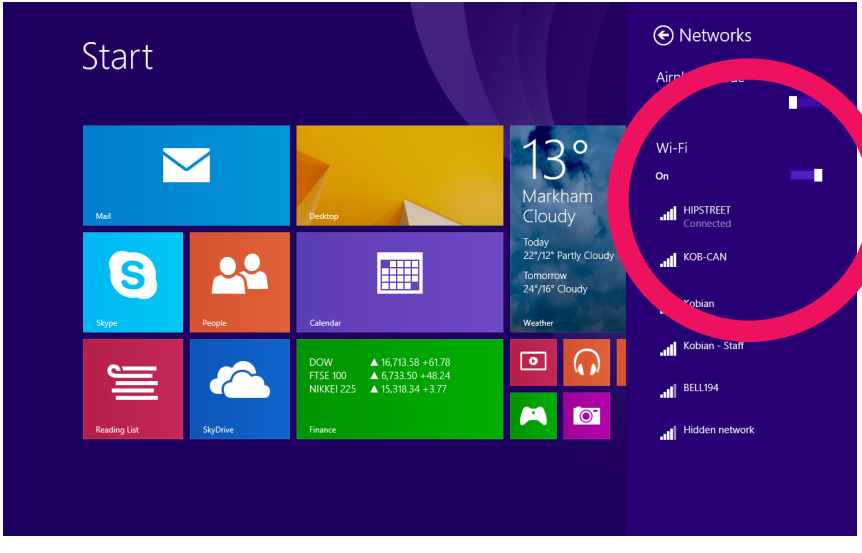
Start
Mail
Desktop
13°
Markham
Cloudy
Today
22°/12° Partly Cloudy
Tomorrow
24°/16° Cloudy
Weather
Skype
People
Calendar
Reading List
SkyDrive
DOW ▲ 16,713.58 +61.78
FTSE 100 ▲ 6,733.50 +48.24
NIKKEI 225 ▲ 15,318.34 +3.77
Finance
Networks
Wi-Fi
On
HIPSTREET
Connected
KOB-CAN
Kobian - Staff
BELL194
Hidden network

CAMERA

Your Windows Tablet comes with a built-in camera with the app preinstalled and ready to use. To open the camera app, tap the associated tile on the **Start** screen.

CAMERA

To open the camera option, swipe up from the bottom of the screen.

CAMERA

WINDOWS STORE

The Windows Store is the place where you can download apps for your Windows Tablet.

You will need a Microsoft account to use this service. Please refer to Windows Help and Support for more detail.

WINDOWS STORE

Tap the Store tile on the Start screen, then browse and install your favorite apps.

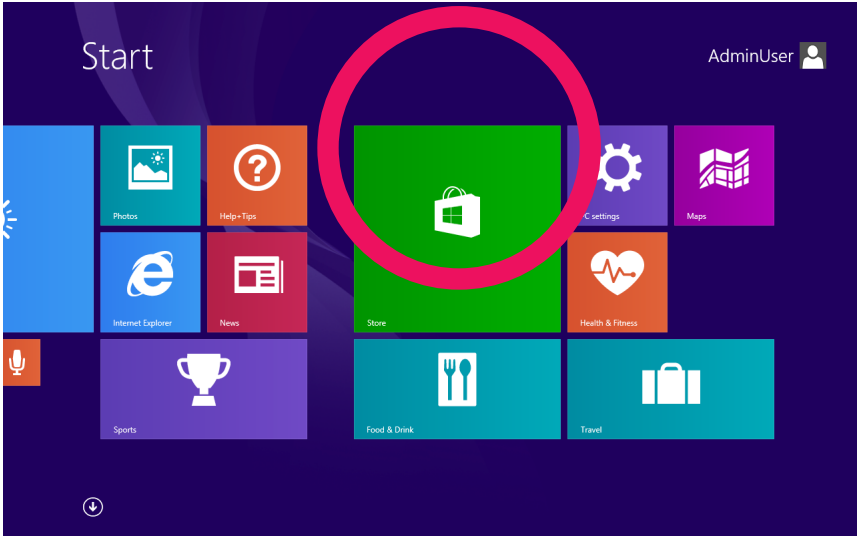

MORE HELP

For more instructions on how to use Windows 8.1, open the Help+Tips app from the Start screen.

MORE HELP

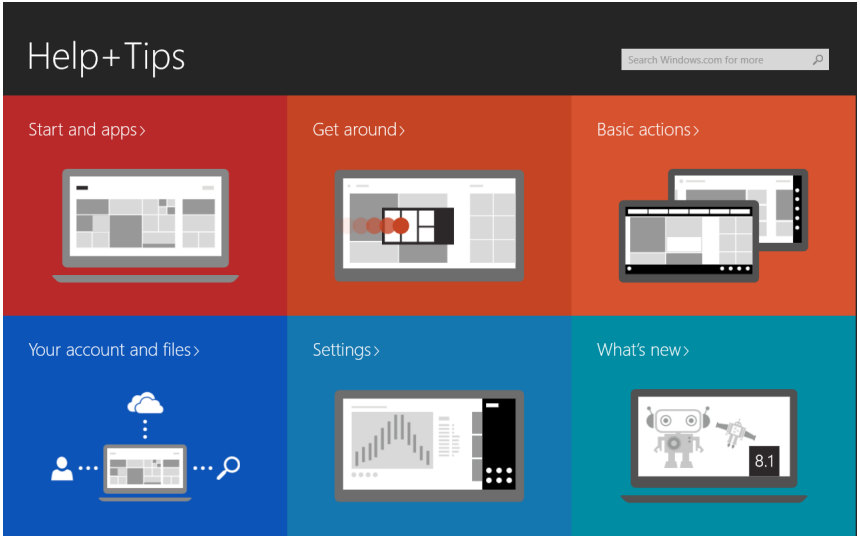
Help+Tips
Search Windows.com for more
Start and apps›
Get around›
Basic actions›
Your account and files›
Settings›
What's new›
8.1

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class C digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This device complies with Canadian ICES-003 and RSS-210

PRODUCT AND BATTERY DISPOSAL

This product contains a built-in lithium battery and should not be disposed of in normal household waste. The battery in this device is not intended to be removed by the individual or end user. For disposal and recycling, please contact your local waste management authorities.
The recycling and processing of electronic waste will make a significant contribution towards helping protect the environment.
The cell within this product uses Lithium Ion technology.

The cell within this product uses Lithium Ion technology. The cell has a voltage rating of 3.7 V and a capacity of 7900mAh, with an energy rating of 29.2Wh (Watt hours)

Warning: To reduce the risk of fire and burns; do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.

CONTACT US

If you encounter any difficulties with this product, please visit our website at www.hipstreet.com and review our support section or call us. Our representatives are ready to help you with any questions about your product. We can guide you through connections, first-time use, or any of the features. Just give us a call or send us an email.

North America	1- 888-456-2426
UK	0800-051-8330
Netherlands	0800-404-0006
Germany	0800-180-7686

Monday through Friday: 8:30am – 5:00pm

Email: support@hipstreet.com
We want you to start enjoying your product right away!